

TRASFORMATORI DI CORRENTE A BASSA TENSIONE

LOW VOLTAGE CURRENT TRANSFORMERS

E 347

ATTENZIONE: Verranno riparati in garanzia, franco ns sede, i dispositivi guasti per difetti sui materiali, entro 24 mesi dalla data di consegna. Emirel non è in alcun caso responsabile per danni, diretti o indiretti, a persone o cose, che derivano da: mancato funzionamento, manomissioni, uso errato od improprio dei propri dispositivi di Protezione e Controllo. Per le applicazioni "in SICUREZZA" si consiglia l'uso di sistemi di "RIDONDANZA".

ISOLAMENTO: a secco, in aria**CONTENITORE:** autoestinguente**FREQUENZA:** 50 ÷ 60 Hz**TEMPERATURA DI****FUNZIONAMENTO:** -10°C÷+70°C**TEMPERATURA DI****IMMAGAZZINAMENTO:** -20°C÷+80°C**TENSIONE DI RIFERIMENTO PER ISOLAMENTO:**

600V (2500Vac x 1min)

Per utilizzare i TA a primario avvolto (E 347M) è necessario interrompere una fase del carico e collegarla ai morsetti di ingresso P1 e P2.

I morsetti di uscita S1 ed S2 vanno collegati ai morsetti amperometrici del relè associato.

**INSULATION:** dry, in air**CASE:** self extinguishing**FREQUENCY:** 50 ÷ 60 Hz**WORKING TEMPERATURE:**

-10°C÷+70°C

STORAGE TEMPERATURE:

-20°C÷+80°C

REFERENCE VOLTAGE FOR INSULATION:


600V (2500Vac x 1min)

When applying the wound primary Current Transformers (like E 347M), it is requested to cut one load phase and connect it to the input pins P1 e P2.

The output pins S1 ed S2 have to be connected to the amperometric pins of the associated relay.

**COME ORDINARE
HOW TO ORDER**

Indicare la sigla riportata nella colonna "MODELLO" della tabella A
The code under column "MODEL" in table A is requested

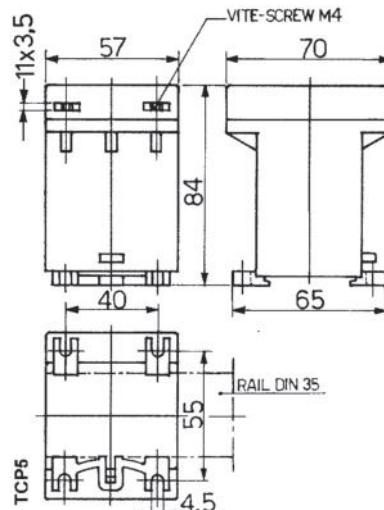

Peso - Weight kg 0,35 circa
Fig. 1

TAB. A

MODELLO MODEL	GAMMA (A) RANGE (A)	Corrente Secondaria SEC. CURR.	PRESTAZ.(VA) BURDEN (VA)	CLASSE CLASS	PRIMARIO PRIMARY	DIMENSIONI SIZES mm
E 347-M	10	5A	1,5	0,5	*	Fig. 1
E 347-A	50	5A	1,5	3	**	Fig. 2
E 347-B	100	5A	3	1	**	Fig. 2
E 347-C	150	5A	1,5	0,5	**	Fig. 2
E 347-I	200	5A	5	1	**	Fig. 2
E 347-D	250	5A	6	0,5	**	Fig. 2
E 347-E	500	5A	12	0,5	**	Fig. 3
E 347-G	1000	5A	30	0,5	**	Fig. 4
E 347-H	2000	5A	50	0,5	**	Fig. 5
E 347-L	4000	5A	120	0,5	**	Fig. 6
E 347-R	300	5A	8	0,5	**	Fig. 2

Legenda della Tab. A


* Trasformatore di corrente a primario avvolto

** Trasformatore di corrente a barra passante.

Legend of Tab. A





* Wound primary current transformer.

** Current transformer without primary.

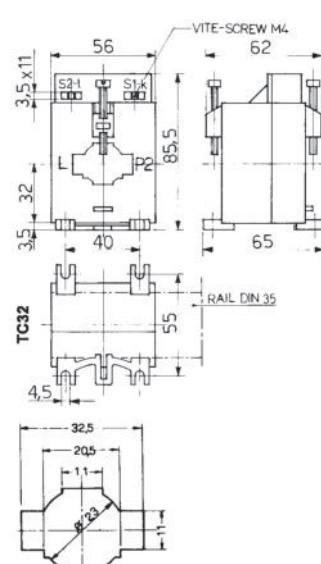


Peso - Weight kg 0,35 circa
Fig. 2

WARNING: Repairs in guarantee are made free our factory, within 24 months from the delivery date, for the devices not working due to defects of the components. In no case Emirel can be held responsible for damages, direct or indirect, occurred to things or people in consequence of wrong connections, accidents, not correct use or not operation of the Protection and Control devices of its own production. For the "safety applications", it is suggested to apply SAFETY systems or REDUNDANCY engineering..

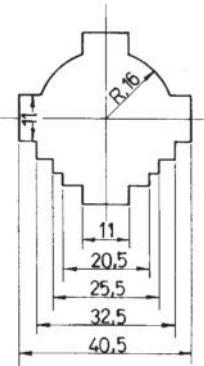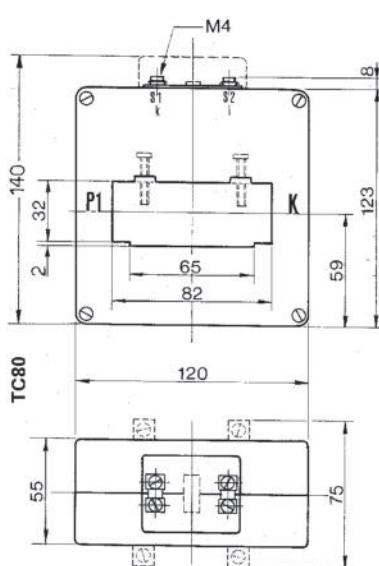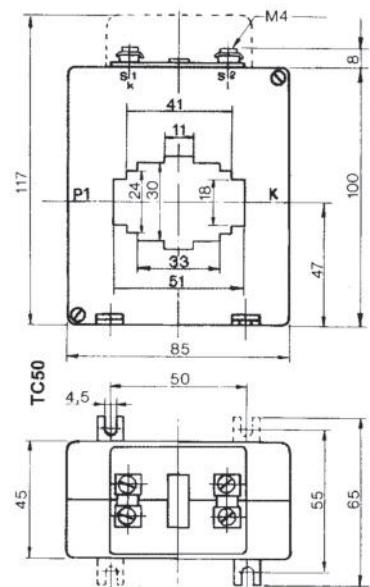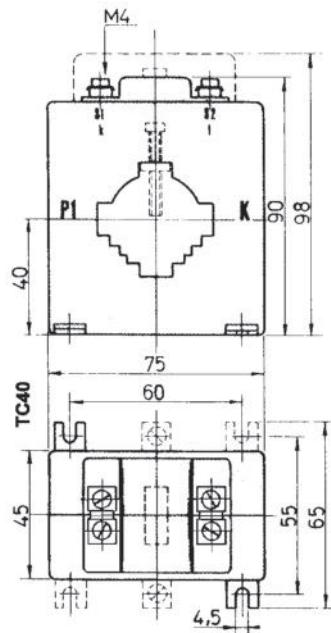

Peso - Weight kg 0,5 circa

Fig. 3

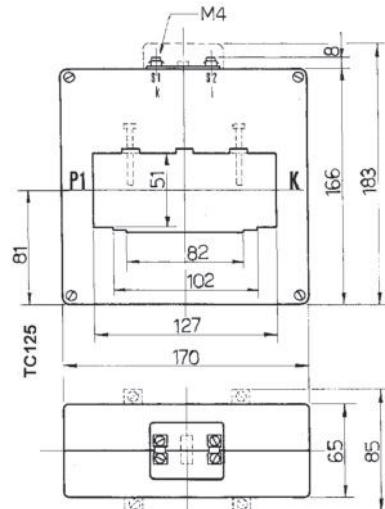

Peso - Weight kg 2 circa

Fig. 6